


Programmable Semi-Custom Full Custom
 Logic

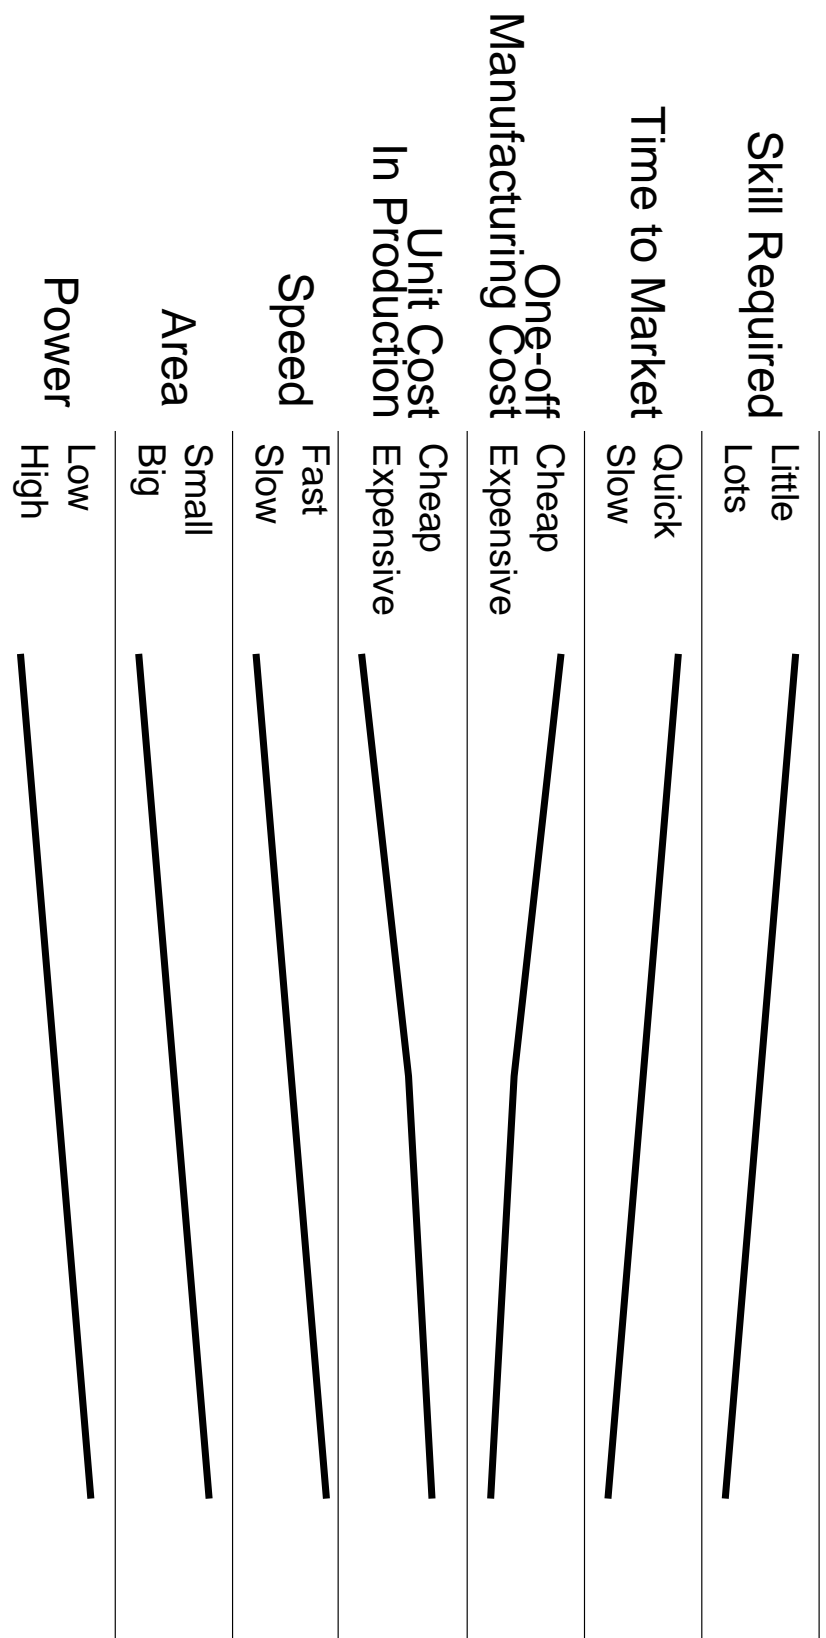

All design styles need full custom designers

A large ASIC (especially SoC) may mix Semi-Custom and Full Custom

10000